

# LCD-show Raspberry Pi

Projektseite: <https://github.com/Lcdwiki/>

Um das Minitouchdisplay zu aktivieren:

## Raspberry Pi Stand 10.2022

```
rm -rf LCD-show
git clone https://github.com/Lcdwiki/LCD-show.git
chmod -R 755 LCD-show
cd LCD-show/
./MHS35-show
```

## Ubuntu Ports ARM 22.04 Stand 10.2022

```
rm -rf LCD-show-ubuntu
git clone https://github.com/Lcdwiki/LCD-show-ubuntu.git
chmod -R 755 LCD-show
cd LCD-show-ubuntu/
./MHS35-show
```

From:

<https://www.deepdoc.at/dokuwiki/> - DEEPDOC.AT - enjoy your brain

Permanent link:

[https://www.deepdoc.at/dokuwiki/doku.php?id=server\\_und\\_serverdienste:lcd-show\\_raspberry\\_pi&rev=1666979402](https://www.deepdoc.at/dokuwiki/doku.php?id=server_und_serverdienste:lcd-show_raspberry_pi&rev=1666979402)

Last update: 2025/11/29 22:06

